



Read Me First

for HP DC ProCurve Switches 4000M and 8000M

The HP DC ProCurve 4000M and 8000M switches and modules are functional equivalent to the AC-powered HP ProCurve Switch products.

The *HP DC ProCurve Switches 4000M and 8000M Installation Guide* provides the following information:

- Installing the switch in a seismic rack
- Connecting the DC power supply
- Replacing DC power supplies
- Specifications and regulatory information

For all other configuration and operation information, refer to the other product information provided with your switch products.

NOTE: All information in the documentation regarding use of this product with AC power is superseded by the DC power information in the *HP DC ProCurve Switches 4000M and 8000M Installation Guide*. Also refer to the *HP DC ProCurve Switches 4000M and 8000M Installation Guide* for specifications and regulatory information, seismic rack mounting, and ordering information for your HP DC ProCurve 4000M and 8000M switches.

The following table provides a cross reference between functional equivalent DC ProCurve part numbers and ProCurve (AC-powered) part numbers.

Product Description	Product Options	Module Product Number	ProCurve Product Number
HP ProCurve Switch 8000M	Z7017E		HP J4110A
HP ProCurve Switch 4000M	Z7017F		HP J4121A
HP Procurve Switch 10/100Base-T Module	Opt. 011	HP Z7017H	HP J4111A
HP Procurve Switch 100Base-FX Module	Opt. 013	HP Z7017K	HP J4113A
HP Procurve Switch Gigabit-SX Module	Opt. 012	HP Z7017J	HP J4112A
HP Procurve Switch Gigabit-LX Module	Opt. 014	HP Z7017L	HP J4114A
HP Procurve Switch 100/1000Base-T Module	Opt. 015	HP Z7017M	HP J4115B
HP Procurve Switch 10Base-FL Module	Opt. 016	HP Z7017N	HP J4118A

Important: When ordering additional modules for your DC ProCurve Products, always order the DC ProCurve Products (HP Zxxxx product numbers).

Warranty Information

For warranty information for your HP DC ProCurve product, contact your HP Contract Administrator or HP Sales and Service Office.